



STEPS TO CONSTRUCT A SOLID, SQUEAK-FREE FLOOR SYSTEM

If not installed properly, floor systems can squeak, buckle, and cause nail-pop. To cut callbacks due to these problems, follow the simple floor construction steps below. APA recommends a glued floor system.

Step 1: Choose the correct materials.

Use dry materials such as I-joists or dry lumber. Dry lumber is more dimensionally stable than green lumber. As it dries, green dimension lumber tends to cause nail-pop, making bumps under the finish flooring. These bumps can lead to squeaks and to accelerated wear of the finish flooring.

APA structural panels are manufactured in a variety of grades and thicknesses. When selecting your floor panel, consider the applied load, joist spacing, finish flooring and floor system (e.g., single floor or subflooring plus underlayment). See Table 1 for the panel that is best for your job.

Step 2: Panel spacing is recommended, leaving room for expansion due to changes in moisture content. From their initial mill-dry state, panels will expand as they reach their equilibrium moisture content. If they are installed without room to expand, panels may buckle. APA recommends leaving 1/8" space at all sheathing and Sturd-I-Floor edge and end joints, including tongue-and-groove joints. See Figure 2 for tongue-and-groove spacing.

To further minimize the potential for panel buckling, allow panels to acclimate prior to installation. To do this,

stand panels on edge for several days, allowing air circulation to all sides.

Step 3: If using a glued floor system, select an adhesive conforming to APA Performance Specification AFG-01 or ASTM D3498. To prevent premature dryout of the adhesive, spread enough glue to lay ONLY 1 or 2 panels at a time.

To assure the panels will be firmly and permanently secured to the joists, wipe away water, dust and debris before applying glue.

Apply glue (about 1/4-inch-diameter bead) to framing members in a continuous line, or in a serpentine pattern in wide areas. Glue all tongue-and-groove joints by spreading glue in groove. Avoid squeeze-out by applying a thinner line in groove (about 1/8 inch) than on joists.

Complete all nailing of each panel before the glue sets or skins over. Check glue manufacturer's recommendations for allowable time. Remember, warm weather accelerates glue setting.

Step 4: Nail panels correctly to prevent squeaks. The correct nail size and spacing for your job depends on your joist spacing and panel thickness, as well as the type of panel product you are using. Attachment schedules and fastener recommendations are provided in Table 1.

For other structural wood panel application recommendations, see APA's *Engineered Wood Construction Guide*, Form E30.

FIGURE 1

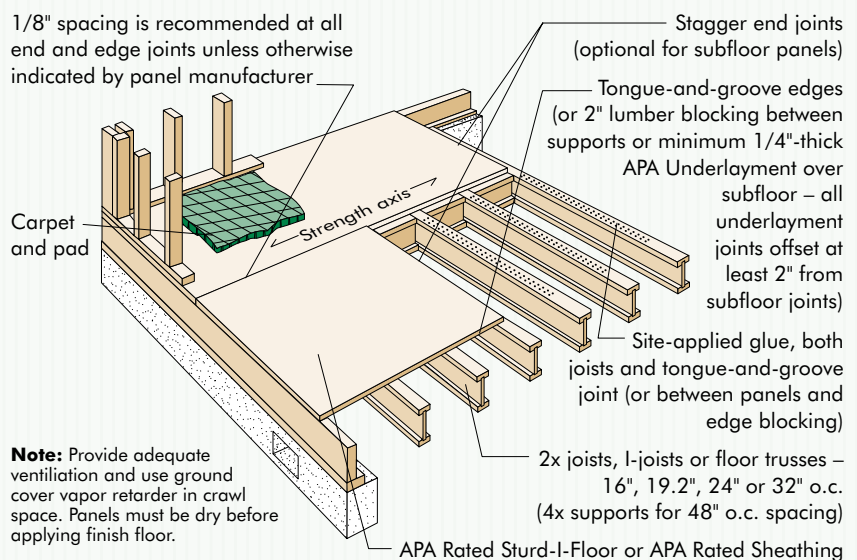


TABLE 1

PANEL AND ATTACHMENT RECOMMENDATIONS FOR APA PANEL FLOORS^(a)

Joist Spacing (in.)	Finish Flooring Type	APA Panel Grade and Span Rating	Nail Size and Type ^(g)	Glue-Nailed		Nailed-Only	
				Maximum Nail Spacing Supported Panel Edges ^(f)	Maximum Nail Spacing Intermediate Supports	Maximum Nail Spacing Supported Panel Edges ^(f)	Maximum Nail Spacing Intermediate Supports
16	Carpet and Pad	STURD-I-FLOOR 16 oc, 20 oc, 24 oc	6d ring- or screw-shank ^(b) (2 x 0.120 in.)				
	Separate Underlayment or Structural Finish Flooring	RATED SHEATHING 24/16, 32/16, 40/20, 48/24	8d common ^(d) (2-1/2 x 0.131 in.)	12	12	6	12
19.2	Carpet and Pad	STURD-I-FLOOR 20 oc, 24 oc	6d ring- or screw-shank ^(b) (2 x 0.120 in.)				
	Separate Underlayment or Structural Finish Flooring	RATED SHEATHING 40/20, 48/24	8d common (2-1/2 x 0.131 in.)	12	12	6	12
24	Carpet and Pad	STURD-I-FLOOR 24 oc, 32 oc, 48 oc	6d ring- or screw-shank ^(b,c) (2 x 0.120 in.)				
	Separate Underlayment or Structural Finish Flooring	RATED SHEATHING 48/24	8d common (2-1/2 x 0.131 in.)	12	12	6	12
32	Carpet and Pad	STURD-I-FLOOR 32 oc, 48 oc	8d ring- or screw-shank ^(b) (2-1/2 x 0.131 in.)	6	12	6	12
48	Carpet and Pad	STURD-I-FLOOR 48 oc	8d ring- or screw-shank ^(e) (2-1/2 x 0.131 in.)	6	6	6	6

(a) For panel recommendations under ceramic tile, refer to *APA Engineered Wood Construction Guide*, Form E30.

(b) 8d common nails (2-1/2 x 0.131 in.) may be substituted if ring- or screw-shank nails are unavailable.

(c) If a 7/8-inch-thick or thicker panel is used, attach with 8d ring- or screw-shank nails (2-1/2 x 0.131 in.). At supported panel edges use a nail spacing of 6 inches on center.

(d) 6d common nails (2 x 0.113 in.) permitted if panel is 1/2 inch or thinner.

(e) 10d common nails (3 x 0.148 in.) may be substituted with 1-1/8-inch panels if supports are well seasoned.

(f) Fasten panels 3/8 inch from panel edges.


(g) For nail dimensions, refer to Table 5 of APA's *Engineered Wood Construction Guide*, Form E30

TYPICAL TRADEMARKS



FIGURE 2

RECOMMENDED TONGUE-AND-GROOVE JOINT SPACING

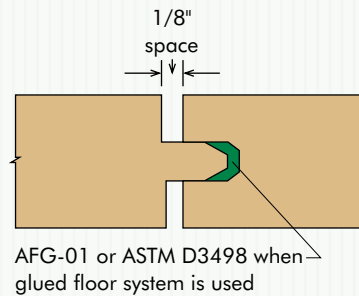

DISCLAIMER

The information contained herein is based on APA – The Engineered Wood Association’s continuing programs of laboratory testing, product research, and comprehensive field experience. Neither APA, nor its members make any warranty, expressed or implied, or assume any legal liability or responsibility for the use, application of, and/or reference to opinions, findings, conclusions, or recommendations included in this publication. Consult your local jurisdiction or design professional to assure compliance with code, construction, and performance requirements. Because APA has no control over quality of workmanship or the conditions under which engineered wood products are used, it cannot accept responsibility for product performance or designs as actually constructed.

We have field representatives in many major U.S. cities and in Canada who can help answer questions involving APA trademarked products. For additional assistance in specifying engineered wood products, contact us:

APA – THE ENGINEERED WOOD ASSOCIATION HEADQUARTERS

7011 So. 19th St.
Tacoma, Washington 98466-5333
(253) 565-6600 • Fax: (253) 565-7265

www.apawood.org

PRODUCT SUPPORT HELP DESK

(253) 620-7400
E-mail Address: help@apawood.org

Form No. Q300M
Revised October 2005/0010

